


Angekis® TOLEDO

wide-angle video conference camera+speakerphone


Product Introduction

The Angekis Toledo integrates an omni-directional microphone and a wide-angle HD video camera. Without any need for drivers, the Toledo is plug and play via USB for PC and suitable for small meeting rooms and huddle rooms enabling real-time communication anywhere, anytime.

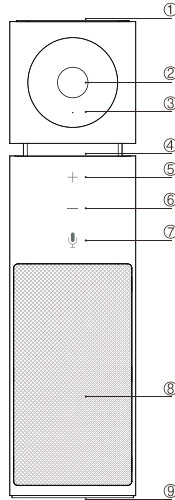

- ① Omni-directional Microphone
- ② Hd Wide-angle Lens
- ③ Lens Indicator Light
- ④ Microphone and Volume Indicator Light
- ⑤ Volume Up
- ⑥ Volume Down
- ⑦ Microphone ON/OFF
- ⑧ Loudspeaker
- ⑨ USB Port

Connection Diagram

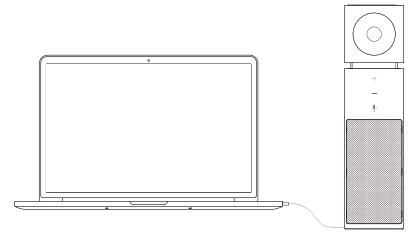

Touch button function description


- + Volume increase touch button
- Volume decrease touch button
- Microphone icon Close or open the microphone touch buttons

LED Indicator Instructions


- Green light on: the microphone and speaker is working
- Red light on: the microphone is mute, the speaker is working
- Green light flash: the volume '+' '-' touch button is operating
- Green light slow flash: the microphone is working, the speaker is mute
- Red and green light slow flash alternately: the microphone is mute, the speaker is mute
- Lens lights on: camera is working

Operating Instructions


Insert the mini USB input of the USB cable into the back of the Toledo and the other end into the USB port of your computer. The following popup will appear on first use:

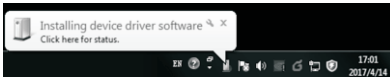

Device drivers will install automatically, after which, the computer will show the following success notice:

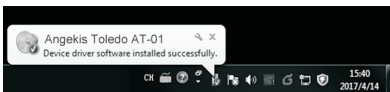

If you need to confirm successful installation of the device driver, navigate to "device manager" and click "sound, video and game controllers". You should see the Toledo in the list.

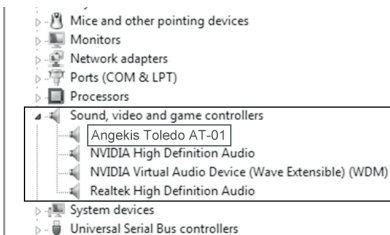

If you need to check that the video is connecting, please navigate to imaging devices. Within this section you should see the Toledo Camera noted as an imaging device.




If you can see the device in imaging and also sound sections on your PC the installation was successful and you are ready to video conference!



When conferencing be sure to check what your default Audio device is, via the bottom bar on your PC as noted below:



To check the default audio device, click on the "speaker" icon

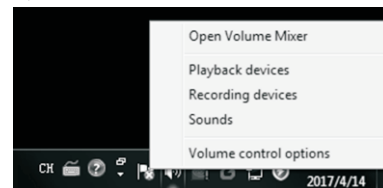

Click on the "recording device" or "playback device" as below:

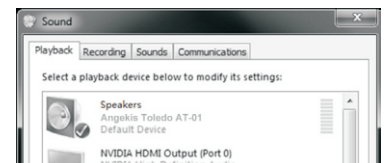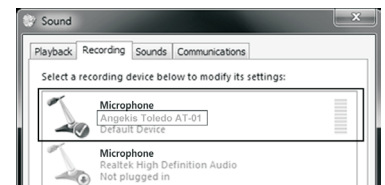

From this window you can make a selection. The device with the tick next to it is the current selection.

Simply click on your preferred device to change the selection.

**Note these examples are based on Windows 7. Other operating systems may be different.

For further support please visit www.angekis.com